


20 MINUTE TOTE

1. decide what size you want your bag to be (it helps to look at a bag you already have) OR, I suggest starting with an 18" x 27" piece for a large tote.


2. press hems into shorter sides at 1"-1 1/2"

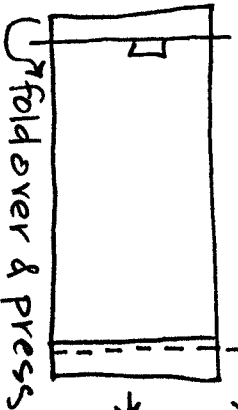

→ stitch 1/4"-1/2" from raw edge
→ make sure your fabric is face down so the raw edge is hidden inside your bag!

• this is a good time to do any embellishing.

3. fold bag in half, lining up hems
make sure your "right" (or public) sides are facing each other.
in other words your bag should look inside out for this step.

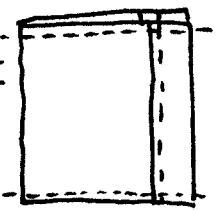

4. turn your bag rightside out & add a strap at the side seams



SELVEDGE STUDIO